




MAINTENANCE MENU


The maintenance menu allows to consult instant or stored information. The following information is displayed:

- State of frequency converter inputs/outputs
- State of inputs/outputs of the processing unit terminal strips
- Values supplied by the sensors
- Indications concerning the radio link (frequency, frequency group, coding, ...)
- Operating time of the mechanisms
- History of fault codes including date and time
- Crane number, processing unit program version
- Teach-in programming parameters

The maintenance menu allows to check the working order of certain crane parts. It is possible to check:

- Driver's stands (radio control, remote control, cab, ...)
- Screen of the processing unit
- Connection of various crane parts with the processing unit (frequency converters, anemometers,...)

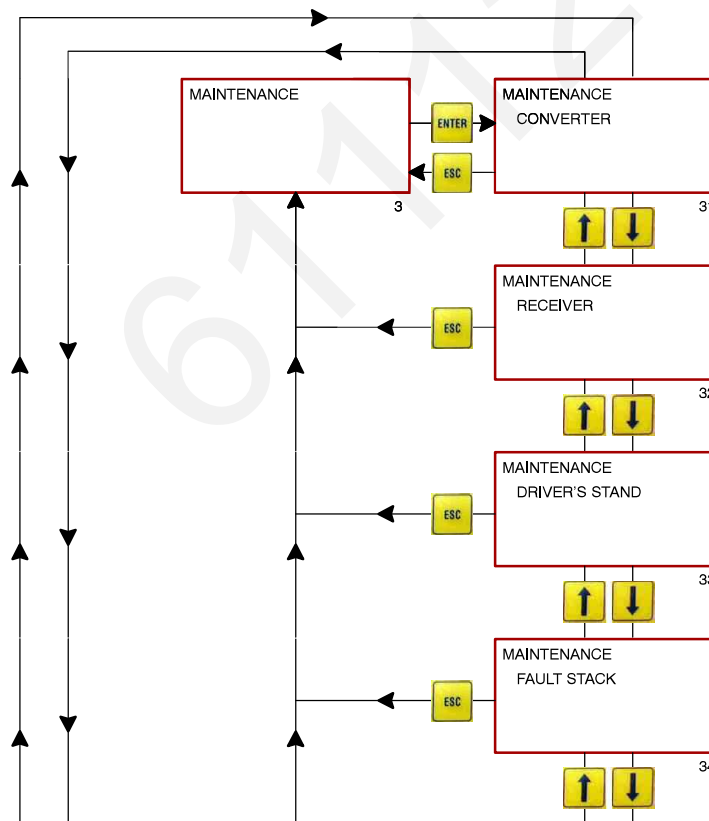

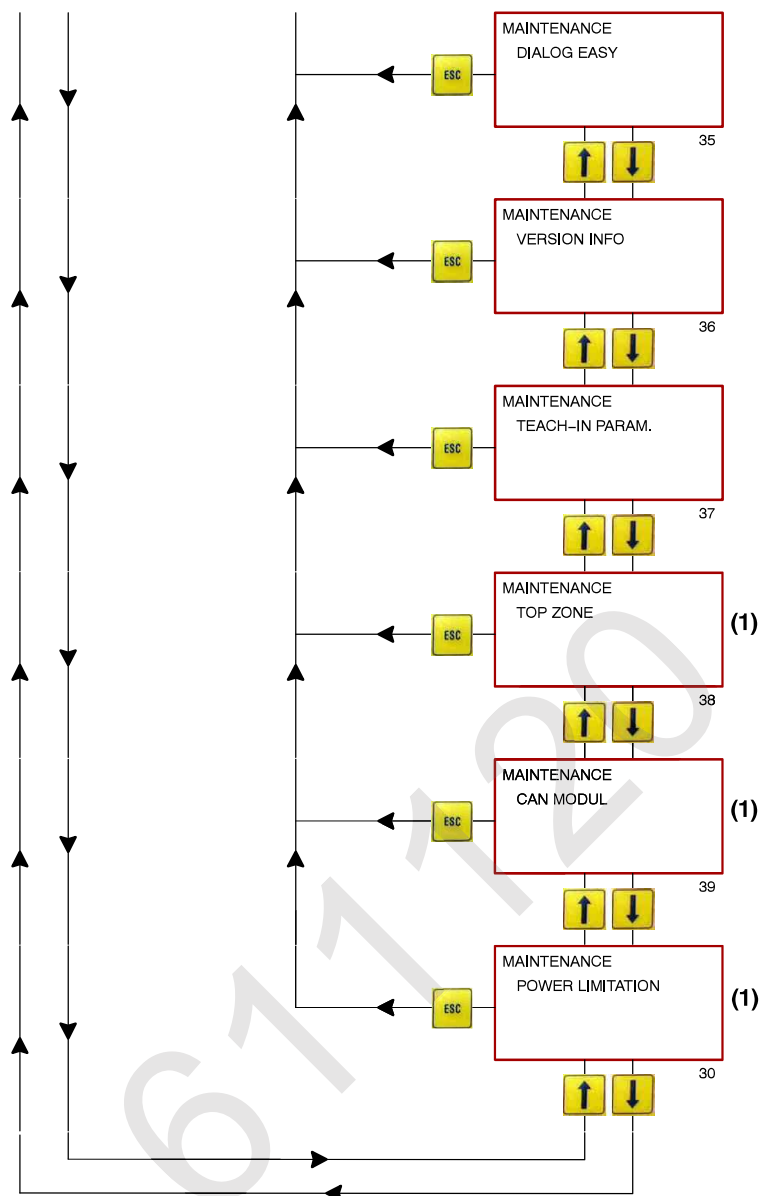

PROCESSING UNIT / Interpretation of the maintenance menu screens

(1) According to the model or optional

