

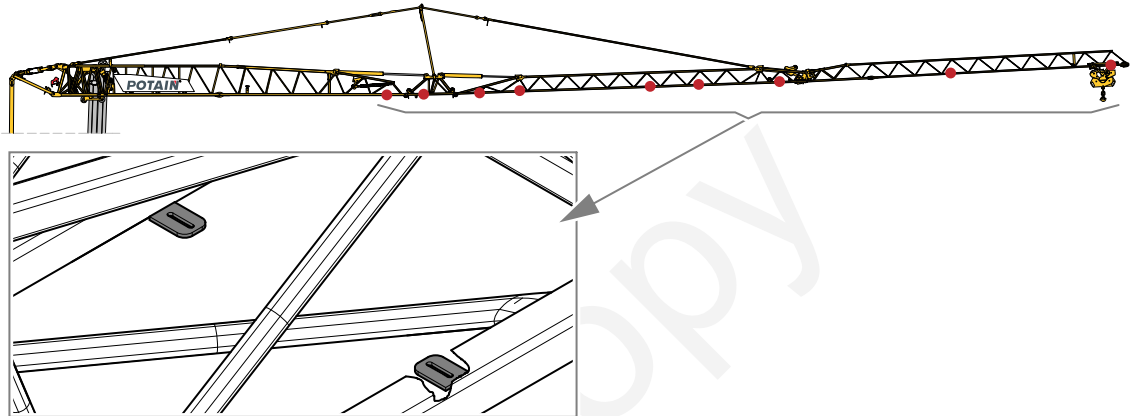
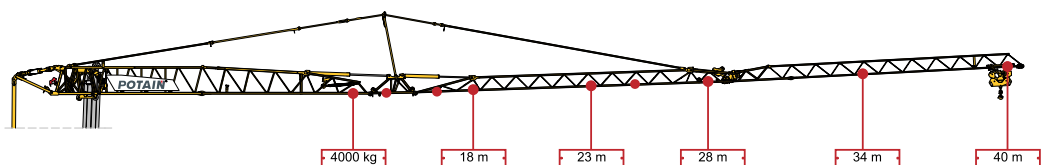
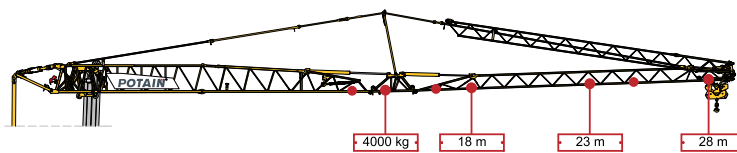


5.1.10 Positions of the load/radius indicating plates

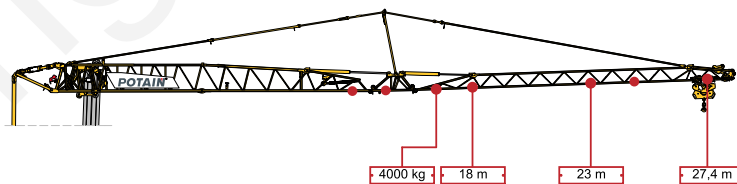

The load/radius indicating plate supports are represented by red circles.

Horizontal jib

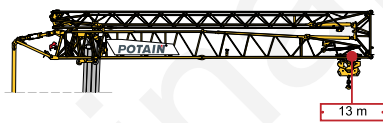


Jib raised 10°



NT_004193_10

***** Internal use only! ***** 2017-11-30 / 09:01:25 MCG\DOC-Documents\Potain\HUP40-30\ENU\Operator

Jib raised 20°

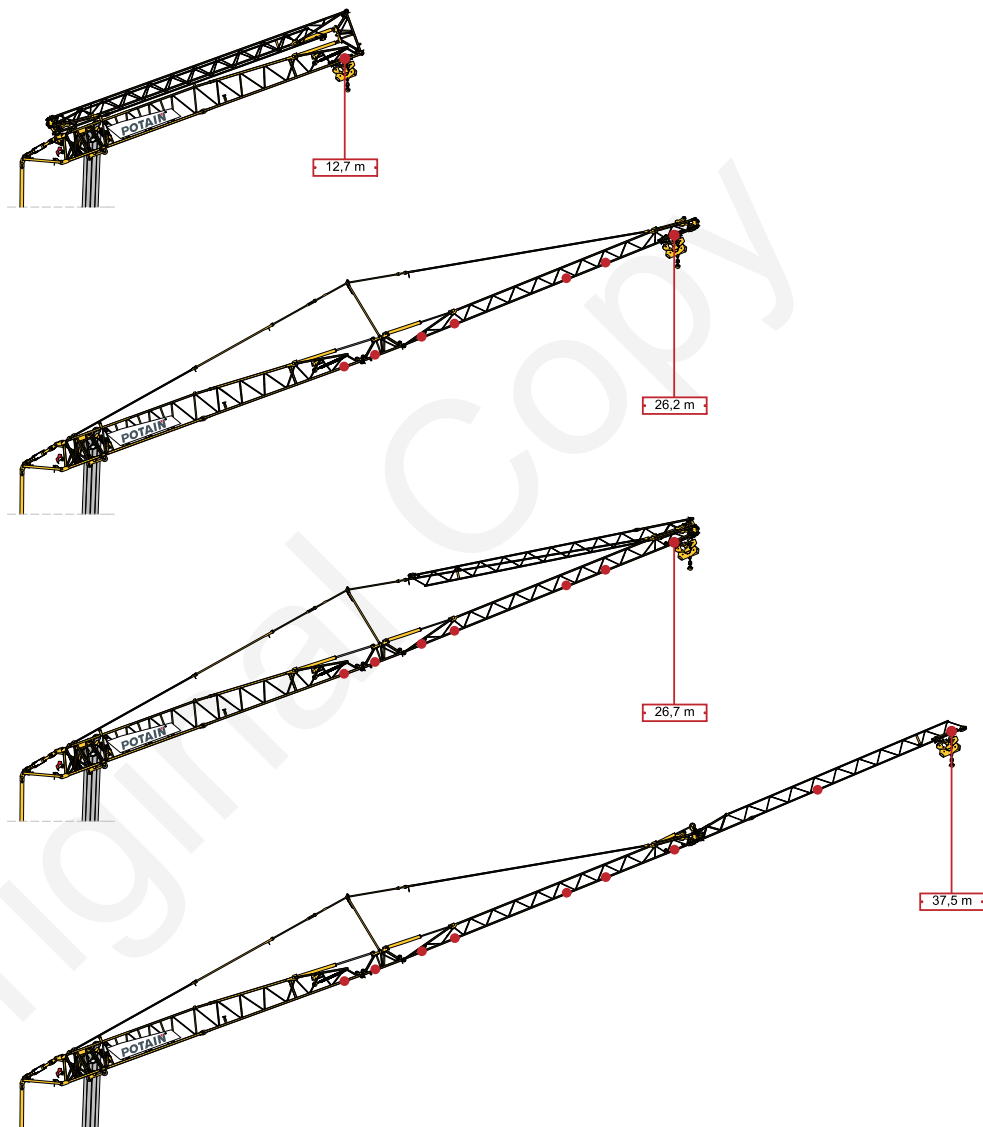

NT_004193_11

5.1.11 Trolleying limit switch

Overview - Potentiometer limit switches

Working principle



Note

The following information applies to both the hoisting mechanism and the trolleying mechanism.