



 
CHANGING THE ROPE REEVING	1
CHANGING FROM DM TO SM₁	1
CHANGING FROM DM TO SM	4

611736



CHANGING THE ROPE REEVING

CHANGING FROM DM TO SM1




- Put the crane in B maintenance position.





MAINTENANCE POSITIONS / Position B


- Unpin the pulley blocks.

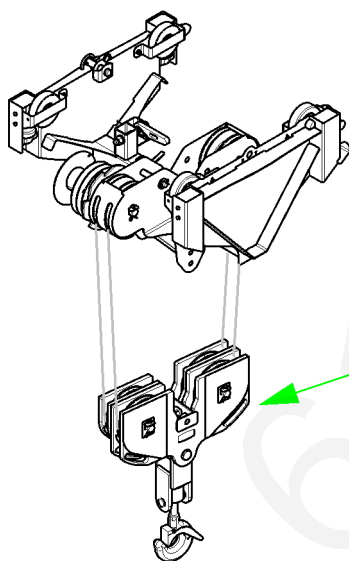

NT_002200_01

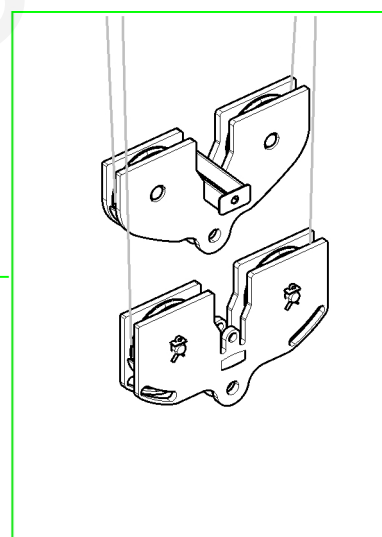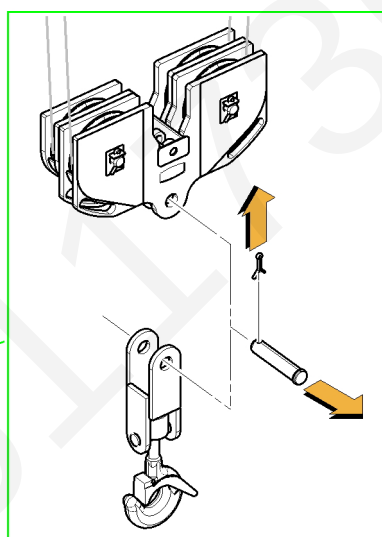


- Unpin the hoist rope (1) from the swivel.

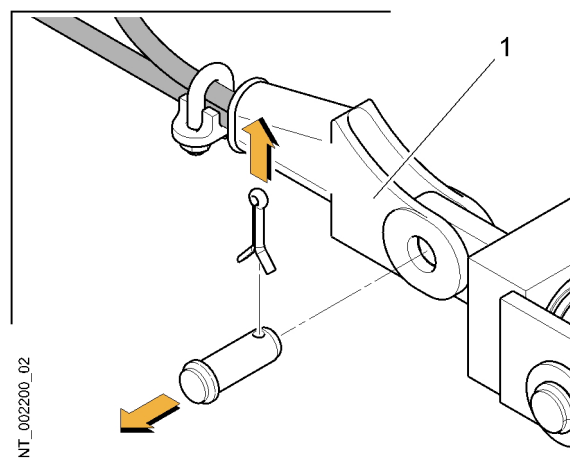


NT_002200_02



- Remove the bulldog grip (2) and the wedge (3).

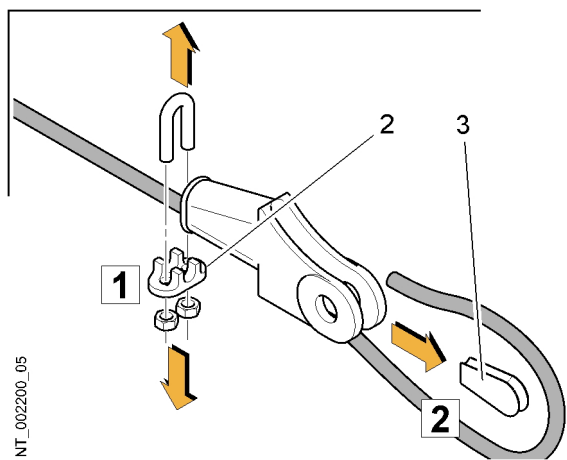


- Remove the rope and lay down the pulley block (4).

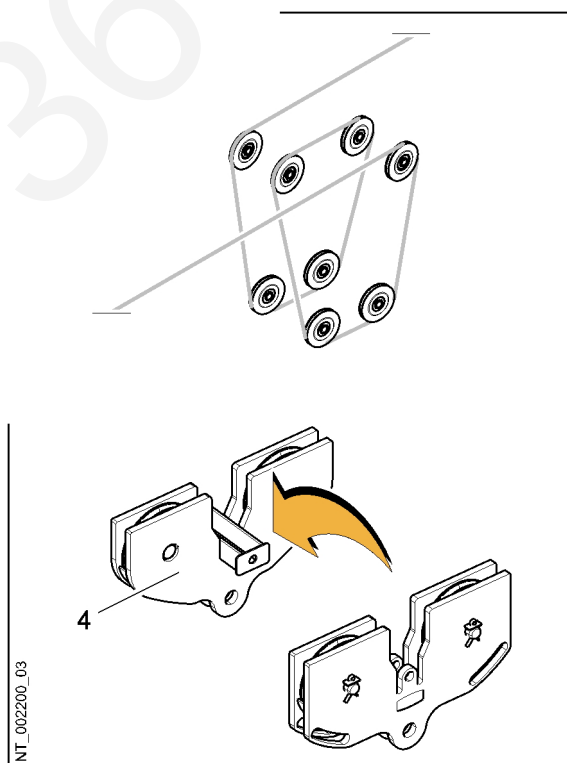





- Refit the rope.

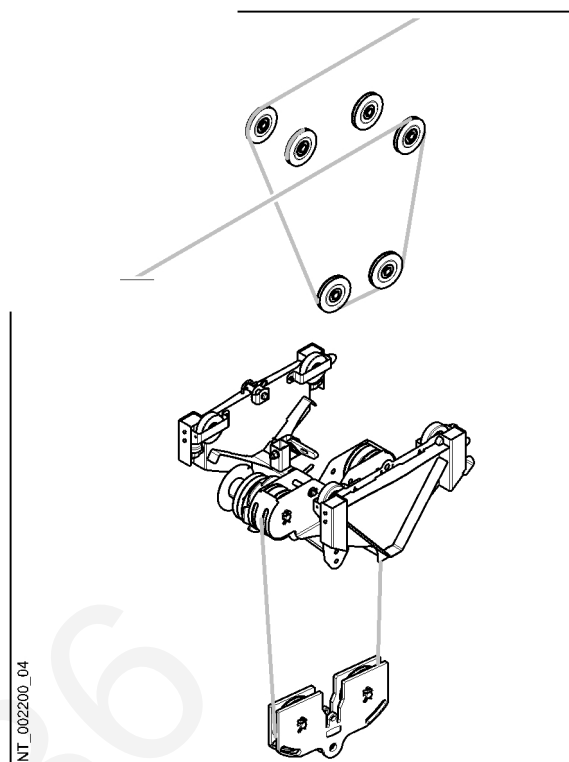

- Refit the wedge (3) and the bulldog grip (2).

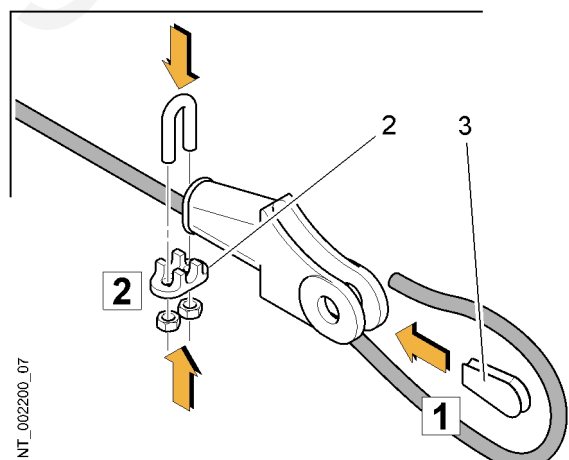


- Repin the hoist rope (1) to the swivel.

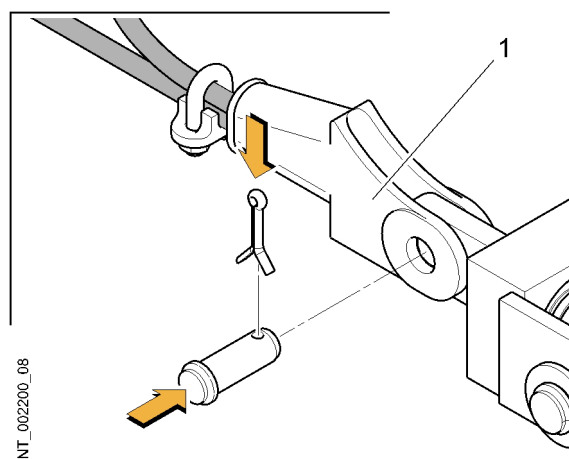




- Pin-connect the hook.

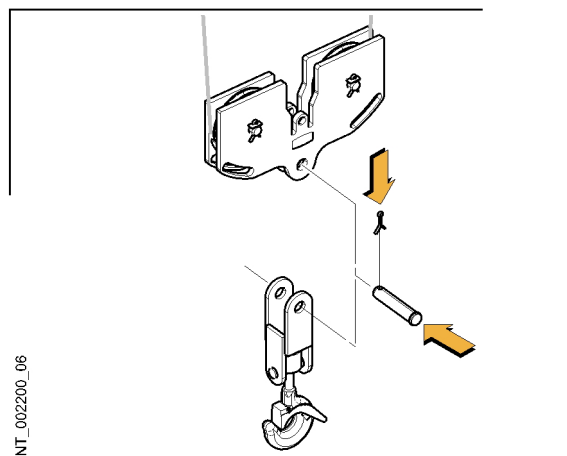

- Put the switch on SM.

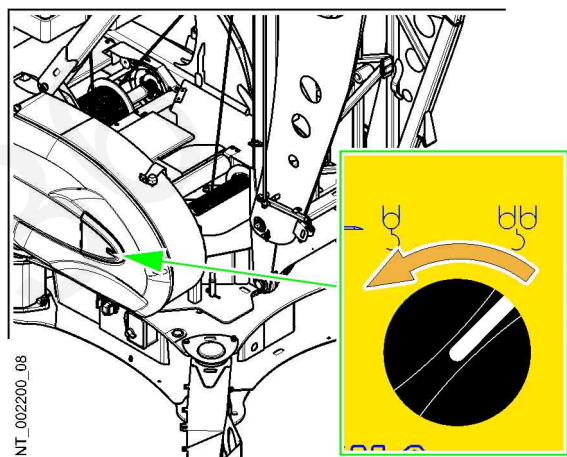

Adjust all the safety devices and carry out the teach-in programming.




SAFETY DEVICES – GENERAL NOTES
PROCESSING UNIT – GENERAL NOTES



Changing from SM1 to DM: operation in reversed order.

CHANGING FROM DM TO SM

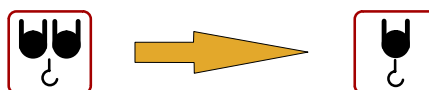

CHANGING THE ROPE REEVING / Changing from DM to SM