


Buttons and screen

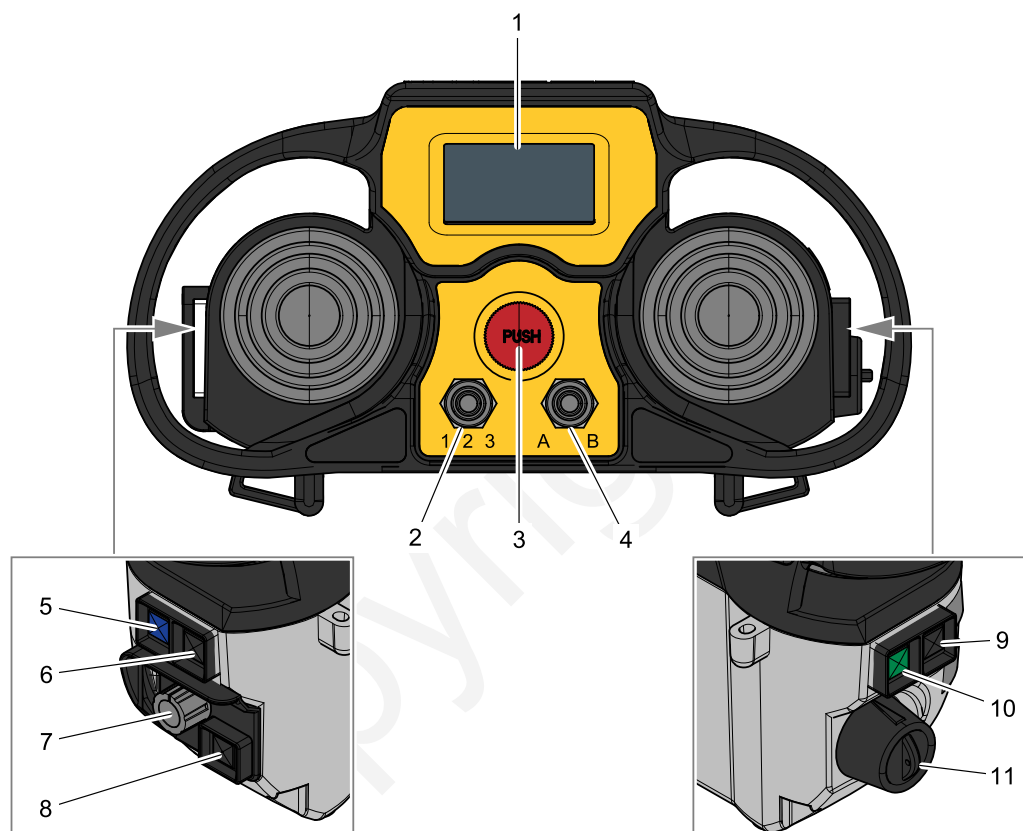

- 1 Screen
- 2 Slewing speed selector or movement selector
- 3 Emergency stop button contact (S101X)
- 4 Work position or fitting position switch
- 5 Slewing brake control contact (S609X)
- 6 Creep speed function (hoisting)
- 7 **Jog Dial** for browsing and validating
- 8 **"ESC"** (escape) button
- 9 Anti-swing function
- 10 "ON" control contact (S100X)
- Horn control contact (S320X)
- 11 Key switch