




- Tighten jib retaining motor screw until retaining pin slides out.



- Back off retaining motor screw (at least until the light is activated on the sensor)



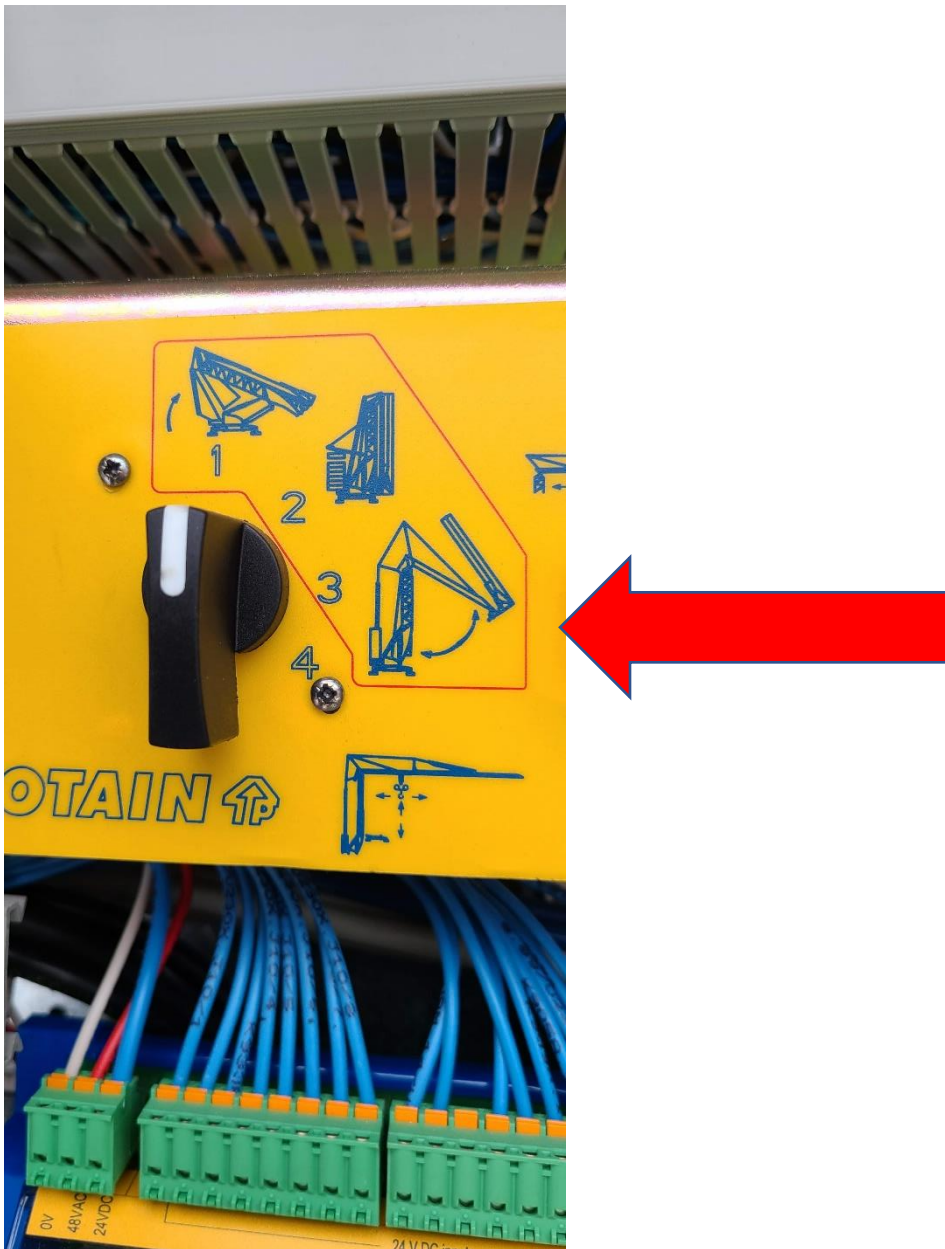

- C3 and maintenance mode (trolley out) jib goes down (go down until sensor is out of range of alignment plate -5 feet-)



- Move maintenance mode switch to left
- 
- (trolley in) jib goes up until stops





- Press button to go past 2 holes, and insert pin



- Validate (push button at least 3 times) and switch back to C4 and honk horn