


List of icons

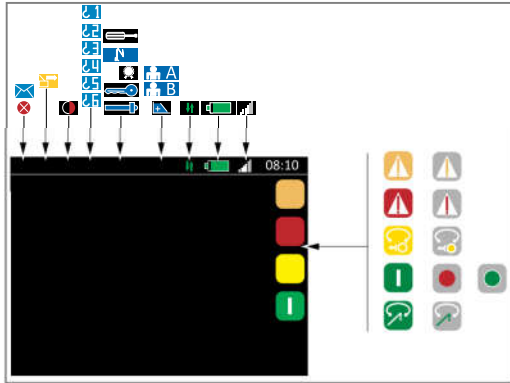

	1		19	12	Fitting
	2		20	13	Receiving test
	3		21	14	Shunt
	4		22	15	Fitting (GME)
	5		23	16	Driver A profile
	6		24	17	Driver B profile
	7		25	18	Load curves P+
	8		26	19	Communication activity
	9		27	20	Accumulator charge level
	10		28	21	Signal reception level
	11		29	22	Horn
	12		30	23	Alarm
	13		31	24	Weathervaning active
	14		32	25	Working
	15			26	Weathervaning for the luffing jib cranes (MR)
	16			27	Inactive horn
	17			28	Inactive alarm
	18			29	Weathervaning inactive
				30	Emergency stop button pushed in
				31	Weathervaning inactive for the luffing jib cranes (MR)
				32	Cut off of power supply to the crane without the emergency stop button pushed in

NT\_004090\_23