

13. Press the **Jog Dial** on the radio control.

- ◀ The **"Working configuration target"** menu is displayed.
- ◀ The **"Jib angle"** is saved.

### 1.3.13 "Low maintenance position" menu

#### Foreword - "Low maintenance position" menu

The **"Low maintenance position"** menu makes it possible to activate a specific mode to position the crane in the low maintenance position.



#### Note

The **"Low maintenance position"** menu is used only when switching to the low maintenance position. Therefore, the access code has already been entered.



#### Note


The following procedure contains illustrations that may not exactly reflect the actual physical reality; they may vary according to the crane models but do not interfere with the proper understanding of the procedure.

## Confirming the "Low maintenance position"

### Procedure


#### Accessing the "General/User" screen

1. Press the **"ESC"** key on the radio control.  
 ◁ The **"General/User"** screen is displayed.

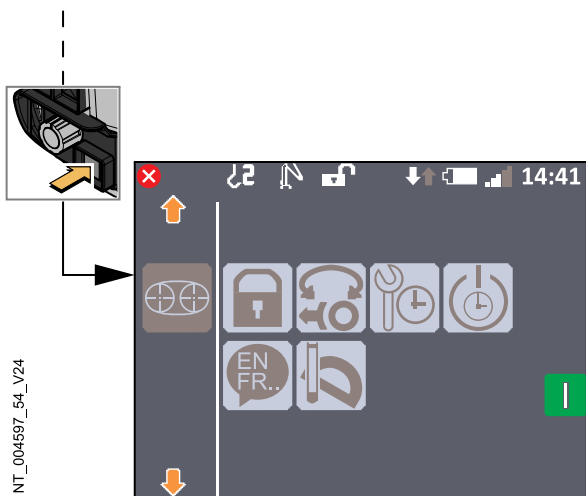


#### Accessing the "Maintenance target" screen

2. Use the **Jog Dial** on the radio control to display the **"Maintenance target"** screen.

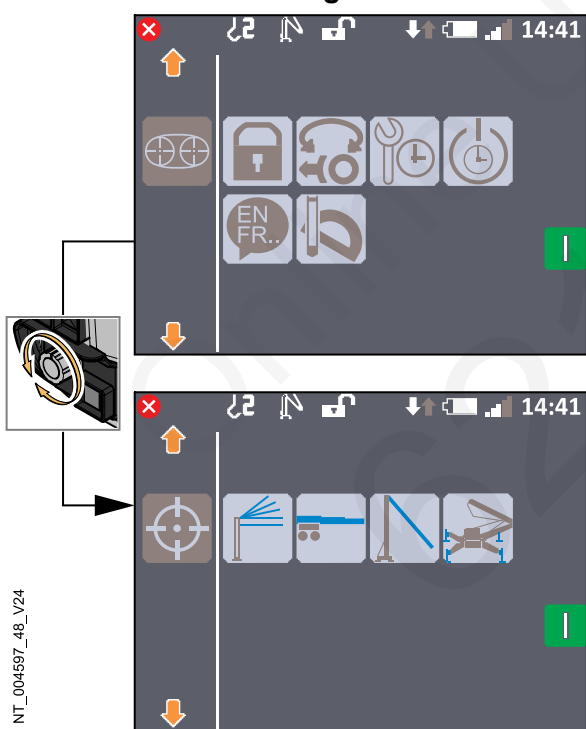


## Selecting the "Low maintenance position" menu

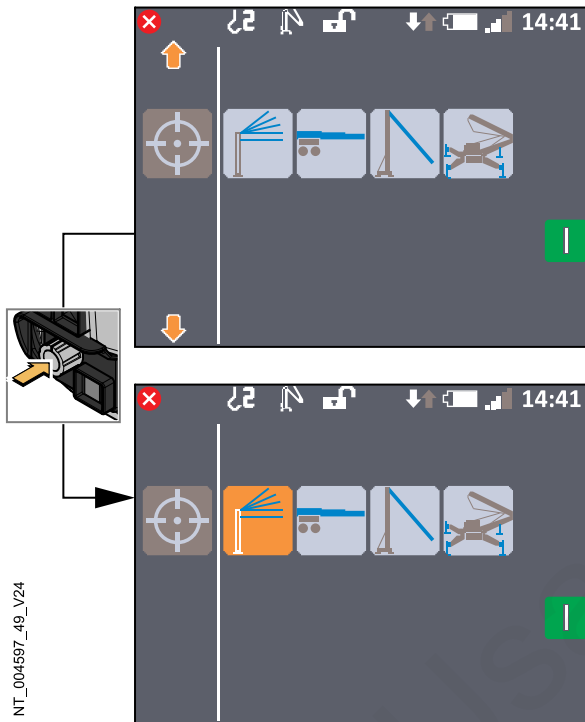

NT\_004597\_49\_V24

3. Press the **Jog Dial** on the radio control.
  - ◀ The **"Working configuration target"** menu is selected.

4. Use the **Jog Dial** on the radio control to select the **"Low maintenance position"** menu, then confirm by pressing the **Jog Dial** on the radio control.
  - ◁ The **"Low maintenance position"** menu is displayed.

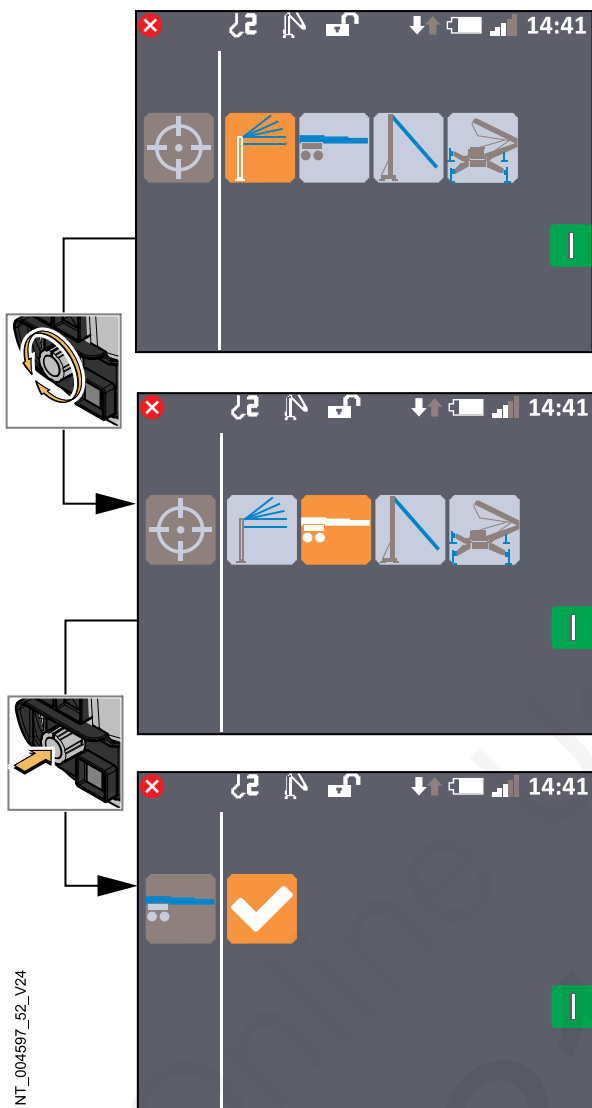



#### Confirming the "Low maintenance position"

5. Press the **Jog Dial** on the radio control.
  - ◁ A **"Fitting/Dismantling"** screen is displayed.
  - ◁ The **"Low maintenance position"** is confirmed.



#### Note

If confirmation of the **"Low maintenance position"** mode is not possible, the symbol  appears on the confirmation pictogram .

