


Einstellung mit CS458 RX (alt) Adjustment with CS458 RX (old)						Frequenz Frequency	Einstellung mit CS458RXN (neu) Adjustment with CS458RXN (new)							
J3	D0	D1	D2	D3	Kanal Channel		Kanal Channel	S1	D2	D3	D4	D5	D6	
X	X	X	X	X	X	458,5000 MHz	0	0	0	0	0	0	0	
							0	0	1	1	1	0	1	
1	1	1	1	1	AK0	458,5250 MHz	1	0	0	0	0	0	1	
							1	0	1	1	1	1	0	
1	0	1	1	1	AK1	458,5500 MHz	2	0	0	0	0	1	0	
							2	0	1	1	1	1	1	
1	1	0	1	1	AK2	458,5750 MHz	3	0	0	0	0	1	1	
1	0	0	1	1	AK3	458,6000 MHz	4	0	0	0	1	0	0	
1	1	1	0	1	AK4	458,6250 MHz	5	0	0	0	1	0	1	
1	0	1	0	1	AK5	458,6500 MHz	6	0	0	0	1	1	0	
1	1	0	0	1	AK6	458,6750 MHz	7	0	0	0	1	1	1	
1	0	0	0	1	AK7	458,7000 MHz	8	0	0	1	0	0	0	
1	1	1	1	0	AK8	458,7250 MHz	9	0	0	1	0	0	1	
1	0	1	1	0	AK9	458,7500 MHz	10	0	0	1	0	1	0	
1	1	0	1	0	AK10	458,7750 MHz	11	0	0	1	0	1	1	
0	1	1	1	1	BK0	458,8000 MHz	12	0	0	1	1	0	0	
0	0	1	1	1	BK1									
1	0	0	1	0	AK11	458,8250 MHz	13	0	0	1	1	0	1	
1	1	0	0	0	AK14									
1	1	1	0	0	AK12	458,8375 MHz	X	X	X	X	X	X	X	
0	1	0	1	1	BK2	458,8500 MHz	14	0	0	1	1	1	0	
0	0	0	1	1	BK3	458,8750 MHz	15	0	0	1	1	1	1	
0	1	1	0	1	BK4									
1	0	1	0	0	AK13	458,9000 MHz	16	0	1	0	0	0	0	
1	0	0	0	0	AK15									
0	0	1	0	1	BK5	458,9250 MHz	17	0	1	0	0	0	1	
0	1	0	0	1	BK6	458,9500 MHz	18	0	1	0	0	1	0	
0	0	0	0	1	BK7	458,9750 MHz	19	0	1	0	0	1	1	
0	1	1	1	0	BK8	459,0000 MHz	20	0	1	0	1	0	0	
0	0	1	1	0	BK9	459,0250 MHz	21	0	1	0	1	0	1	
0	1	0	1	0	BK10	459,0500 MHz	22	0	1	0	1	1	0	
0	0	0	1	0	BK11	459,0750 MHz	23	0	1	0	1	1	1	
0	1	1	0	0	BK12	459,1000 MHz	24	0	1	1	0	0	0	
0	0	1	0	0	BK13	459,1250 MHz	25	0	1	1	0	0	1	
0	1	0	0	0	BK14	459,1500 MHz	26	0	1	1	0	1	0	
0	0	0	0	0	BK15	459,1750 MHz	27	0	1	1	0	1	1	
X	X	X	X	X	X	459,2000 MHz	28	0	1	1	1	0	0	

J3 ist auf der Platinen-Rückseite
J3 is at the bottom of the board

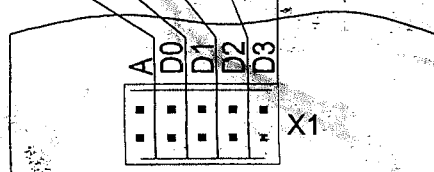

Am Sender muß A immer "1" sein!
Am Empfänger muß A immer "0" sein!
At the Transmitter A must be "1"!
At the Receiver A must be "0"!

X= Einstellung nicht möglich
X= Adjustment not possible



J1/J2/J3 offen/open