

Accessing the "Fault code management" application

Procedure

- Choose one of the following alternatives.

Alternative 1 of 2 – For Android smartphones



- Flash the QR code.

Alternative 2 of 2 – For Apple smartphones



- Flash the QR code.

2.14.8 Checking good working order of the brake (error E.68) - Frequency converter KEB

Procedure

1. With the frequency converter switched on, do not operate any control.

Result

An error E.68 appears on the display of the frequency converter.

- Check the state of the frequency converter input 13 (open circuit = 0 V).

2. Operate "Hoisting 1st notch."

Result

An error E.68 appears on the display of the frequency converter.

- Check the brake release.
- Adjust the microcontact (S409S) - Hoisting brake. ➡ page 1-33
- Check the state of the frequency converter input 13 when the brake is released.

Technical data
24 V DC