

● 25501

Stop monitoring

▲ Fault Code type: Error

— Association: The crane driver has released the joystick, but the mechanism did not stop or took too long to stop.

4 Component(s)

Diagnostics and Solutions

1 Defective brake

Solutions

Control the mechanism several times with different load cases.

Check that the mechanism stops correctly.

Check the brake condition.

2 Variable frequency drive configured incorrectly

3 The position sensor is dismantled and has been turned manually

● 25501

Stop monitoring

▲ Fault Code type: Error

— Association: The crane driver has released the joystick, but the mechanism did not stop or took too long to stop.

4 Component(s)

Diagnostics and Solutions

1 Defective brake

2 Variable frequency drive configured incorrectly

Solutions

Check the variable frequency drive configuration.

3 The position sensor is dismantled and has been turned manually

● 25501

Stop monitoring

▲ Fault Code type: Error

— Association: The crane driver has released the joystick, but the mechanism did not stop or took too long to stop.

4 Component(s)

Diagnostics and Solutions

1 Defective brake

2 Variable frequency drive configured incorrectly

3 The position sensor is dismantled and has been turned manually

Solutions

Refit the sensor. The fault can be ignored and acknowledged.