

**Note**

The "**Configuration and teach-in programming**" menu is used to calibrate the safety devices. The information is also used to display driving assistance data on the "**Indicators**" screen.

In the "**Configuration and teach-in programming**" menu, all movements are operable; the speeds are limited to 50% of their maximum values.

**Note**

An incorrect configuration can cause a dangerous situation that could lead to an accident. **Manitowoc** accepts no responsibility in the event of use not in accordance with the technical manual, or in the event of use in cases other than those described in the technical manual of the crane.

**Note**

The values, options, and equipment mentioned in this procedure are given as examples only.

Perform the configuration and teach-in programming of the crane using only the values, options, and equipment corresponding to the crane.


**Note**

The following procedure contains illustrations that may not exactly reflect the actual physical reality; they may vary according to the crane models but this does not affect proper understanding of the procedure.

Entering an access code

Procedure

Accessing the "General/User" screen

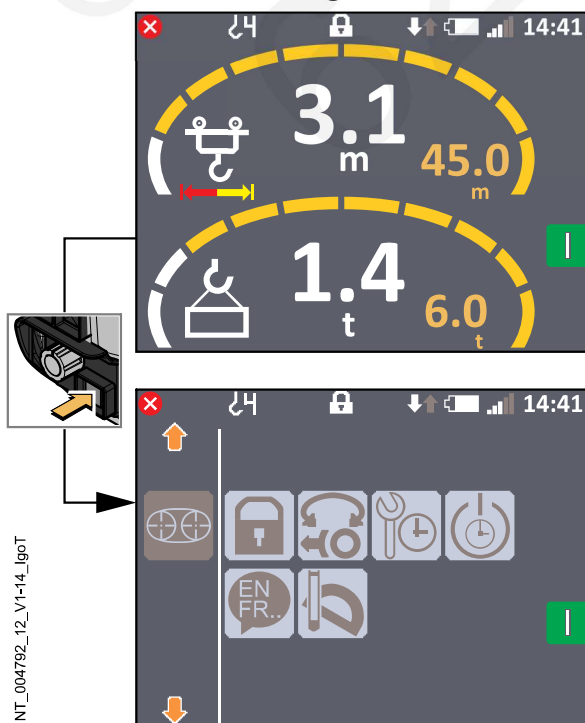


1. Press the "**ESC**" key on the radio control.

< The "**General/User**" screen is displayed.

Accessing the "Access code" menu

2. Press the **Jog Dial** on the radio control twice.
 - ◁ The screen for entering an **"Access code"** is displayed.

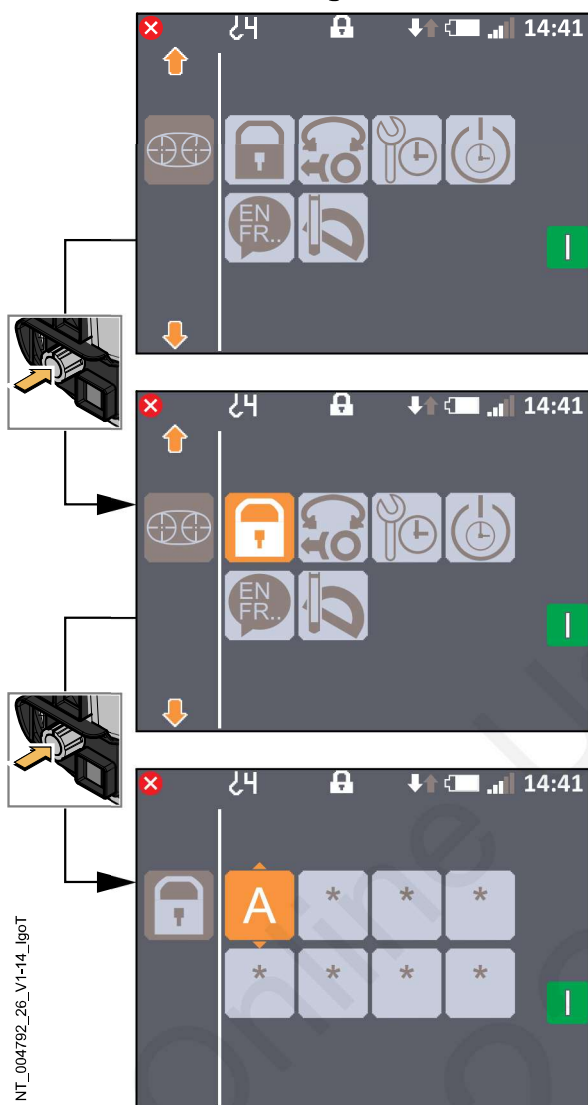

Entering an "Access code"

3. Enter an "Access code" ➡ page 1-28.